


# INSTALLATION, OPERATION AND MAINTENANCE MANUAL

MODEL ZF1, ZF2 & ZF3 Rated 15,25,40 & 70 Amps, Single and  
Three Phase SCR Power Controls

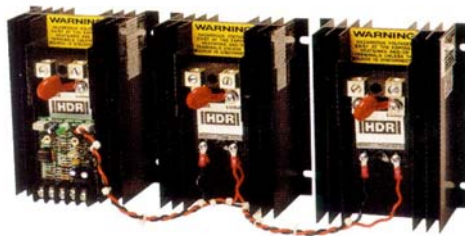

## **ISE, Inc**

10100 Royalton Rd. Cleveland, OH 44133 USA

Tel: (440) 237-3200 Fax: (440) 237-1744

<http://iseinc.com>

---

**INSTALLATION, OPERATION and  
MAINTENANCE MANUAL**

**MODEL ZF1, ZF2 and ZF3 rated 15, 25, 40 & 70 AMP  
SINGLE and THREE PHASE - 2 or 3 LEG CONTROL  
SOLIDSTATE RELAY (SSR) POWER CONTROLS**

---

UL/cUL FILE NUMBER – E151547

CSA FILE NUMBER – LR91210

CE – See last page of manual for CE Declaration of Conformity.



## REVISION PAGE

| <u>Page</u> | <u>Change</u> | <u>Revision</u>                       | <u>Date</u> |
|-------------|---------------|---------------------------------------|-------------|
| 28          | 1             | Added EMC statement to EC Declaration | 11-00       |

NOTE: ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE

# TABLE OF CONTENTS

| <b><u>Para.</u></b>                           | <b><u>Title</u></b>                   | <b><u>Page</u></b> |
|---|---------------------------------------|--------------------|
| <b>Section 1 - DESCRIPTION</b>                |                                       |                    |
| 1-1   | Models Covered.....                   | 1                  |
| 1-2   | General Description.....              | 1                  |
| 1-3   | Applications.....                     | 1                  |
| 1-4   | Specifications.....                   | 1                  |
| 1-5   | Options.....                          | 2                  |
| 1-6   | Operation.....                        | 2                  |
| <b>Section 2 - INSTALLATION</b>               |                                       |                    |
| 2-1   | Mounting.....                         | 5                  |
| 2-2   | Line/Load Power Wiring.....           | 5                  |
| 2-3   | Safety Issues.....                    | 6                  |
| <b>Section 3 - COMMAND SIGNAL CALIBRATION</b> |                                       |                    |
| 3-1   | Zero and Span Adjustments.....        | 19                 |
| 3-2   | Command Indicator.....                | 19                 |
| 3-3   | Remote Manual Control.....            | 19                 |
| 3-4   | Process Command Signal.....           | 20                 |
| <b>Section 4 - MAINTENANCE</b>                |                                       |                    |
| 4-1   | Environmental Concerns.....           | 24                 |
| 4-2   | Line/Load Power Connections.....      | 24                 |
| 4-3   | Troubleshooting Typical Symptoms..... | 24                 |
| <b>Section 5 - SERVICE AND SPARE PARTS</b>    |                                       |                    |
| 5-1   | Customer Service.....                 | 26                 |
| 5-2   | Spare Parts.....                      | 26                 |
| 5-3   | Warranty.....                         | 26                 |

## TABLES and ILLUSTRATIONS LIST

### TABLES

| <u>Table</u> | <u>Title</u>   | <u>Page</u> |
|--------------|--|-------------|
| 1            | Specifications.....                                    | 1           |
| 2            | % Output Voltage at Various Input Command Levels ..... | 3           |
| 3            | Fusing Requirements.....                               | 6           |
| 4            | Minimum/Maximum Currents .....                         | 7           |

### ILLUSTRATIONS

| <u>Figure</u> | <u>Title</u>   | <u>Page</u> |
|---------------|--|-------------|
| 1             | Line/Load Power Wiring ZF1 Models .....                  | 8           |
| 2             | Line/Load Power Wiring ZF2 Models .....                  | 8           |
| 3             | Line/Load Power Wiring ZF3 Models .....                  | 9           |
| 4             | Outline & Mounting Dimensions – ZF1 15, 25 & 40A.....    | 10          |
| 5             | Outline & Mounting Dimensions – ZF1 70A .....            | 11          |
| 6             | Outline & Mounting Dimensions – ZF2 15, 25 & 40A .....   | 12          |
| 7             | Outline & Mounting Dimensions – ZF2 70A .....            | 13          |
| 8             | Outline & Mounting Dimensions – ZF3 15, 25 and 40A ..... | 14          |
| 9             | Outline & Mounting Dimensions – ZF3 70A .....            | 15          |
| 10            | 24 VAC Transformer Dimensions & Schematic.....           | 16          |
| 11            | Single-Phase Fuse Block Dimensions .....                 | 17          |
| 12            | Three-Phase Fuse Block Dimensions.....                   | 18          |
| 13            | Remote Manual Control (-V) Models.....                   | 21          |
| 14            | Process Command Signal (-V) Models.....                  | 22          |
| 15            | Process Command Signal (-C) Models .....                 | 23          |

## **DRAWING LIST**

|                                      |          |
|--------------------------------------|----------|
| Schematic, ZF1 15 Thru 40A (-C)..... | S2710000 |
| Schematic, ZF1 15 Thru 40A (-V)..... | S2710001 |
| Schematic, ZF1 70A (-C).....         | S2710079 |
| Schematic, ZF1 70A (-V).....         | S2710080 |
|                                      |          |
| Schematic, ZF1-C Firing Circuit..... | S2078000 |
| Assembly, ZF1-C Firing Circuit.....  | M2078000 |
| Schematic, ZF1-V Firing Circuit..... | S2079000 |
| Assembly, ZF1-V Firing Circuit.....  | M2079000 |
|                                      |          |
| Schematic, ZF2 15 thru 40A (-C)..... | S2710017 |
| Schematic, ZF2 15 thru 40A (-V)..... | S2710018 |
| Schematic, ZF2 70A (-C).....         | S2710081 |
| Schematic, ZF2 70A (-V).....         | S2710082 |
|                                      |          |
| Schematic, ZF2-C Firing Circuit..... | S2081000 |
| Assembly, ZF2-C Firing Circuit.....  | M2081000 |
| Schematic, ZF2-V Firing Circuit..... | S2082000 |
| Assembly, ZF2-V Firing Circuit.....  | M2082000 |
|                                      |          |
| Schematic, ZF3 15 thru 40A.....      | S2710034 |
| Schematic, ZF3 70A.....              | S2710083 |
| Schematic, ZF3 Firing Circuit.....   | S2099148 |
| Assembly, ZF3 Firing Circuit.....    | M2099148 |

NOTE: If full size drawings are required, contact HDR inside sales and request the desired drawing(s) by the drawing number listed above.

## Section 1 - DESCRIPTION

---

### 1-1 MODELS COVERED

This manual covers the ZF1, ZF2 and ZF3 models rated 15, 25, 40 & 70 amperes and their options.

### 1-2 GENERAL DESCRIPTION

The ZF1, 2 and 3 models are solid-state, single and three-phase, zero-fired (ZF) Solidstate Relay power controls which will operate on line voltages up to 600 VAC. They accept most all standard process command signals and regulate the output voltage. Zero and Span Multi-turn potentiometers are provided to ease calibration. An isolated base Solid-State-Relay (SSR) module is used for power switching in each controlled phase. This module contains two SCRs connected back to back and a zero-crossing detector. The firing circuit is based on common integrated circuits that provides very reliable operation. Terminals are provided to ease installation.

### 1-3 APPLICATIONS

A variable time base firing circuit is used to provide precise control of power to resistive loads. These units should never be used on inductive loads. However, they are versatile enough to be used in place of mechanical contactors and mercury relays on dryers, kilns, ovens, environmental chambers, extruders, molding equipment, and other types of equipment which uses resistive heat.

### 1-4 SPECIFICATIONS

**TABLE 1**

|  |
|--|
| CONTROL METHOD - Zero firing of back to back SCRs in each phase.<br>VOLTAGE RATING - Up to 600 VAC, 1 or 3 Ph., 50/60 Hz.<br>CURRENT RATING - 15, 25, 40 & 70 Arms.<br>COMMAND SIGNAL - 4-20 ma, 0-5 VDC/0-10 VDC, Manual Control.<br>ISOLATION - 2500 Vrms from line/load to command signal to ground.<br>ADJUSTMENTS – Zero and Span, Multi-turn.<br>AMBIENT TEMPERATURE – Operating, 0 to 50C; Storage, -10 to 70C.<br>AGENCY LISTING – 15, 25, 40A UL/cUL Listed, CSA Certified, CE Compliant.<br>70A UL/cUL, CE Compliant |
|--|

## 1-5 OPTIONS

Three options are available: a Fuse Kit, a 24 VAC Control Transformer for the -V Models and heat sink thermostat(s).

The Fuse Kit (Option FK) consists of a Semi-Conductor Fuse and fuse block. It is the user's responsibility to mount this fuse kit.

The (-V) models require 24 VAC (3VA) control power. An appropriately sized transformer (Option TX) is available with 120, 240, 400, 480 or 575 VAC primaries.

Over-temperature thermostats are mounted on each heat sink. Specify NO for normally open or NC for normally closed.

## 1-6 OPERATION

The power is controlled by the switching action of two SCRs connected in a back to back configuration in each controlled phase. The zero crossing detector built into the solid-state relay module synchronizes the gating of these SCRs with the line frequency (either 50 or 60 HZ). The firing circuit provides timing pulses to the SSR proportional to the command signal. These pulsed determine the output level. The output may be adjusted by a voltage or current signal from a process controller. Zero and Span controls allow the user to calibrate the power controller's output to the process signal. Terminals are also available for connection of a remote manual potentiometer on the (-V) model.

### **WARNING**

**Hazardous voltages exist at the power controller heat sinks and at the load at all times when the input voltage is connected. This condition exists even when the controller is set to deliver zero output.**

**NOTE: On the (-V) models, the zero control can be used as a manual control, or a remote manual control can be connected.**

The power controller regulates the output voltage by proportionally controlling the number of AC cycles "on" versus the number "off". Because the voltage is "turned on" at zero crossing, very little radio frequency interference (RFI) is generated and



the power factor (PF) is near unity. Keep in mind that ZF units can only be used on resistive loads. If an inductive load or a load with a large resistance change (instantaneously or cold to hot) is being used, a phase fired (PF) power control should be used.

| <b>TABLE 2</b><br><b>% OUTPUT VOLTAGE AT VARIOUS</b><br><b>INPUT COMMAND LEVELS</b> |                                   |
|---|-----------------------------------|
| <b>Ma</b><br><b>Input</b>   | <b>%</b><br><b>Output Voltage</b> |
| 4   | 0                                 |
| 5   | 10                                |
| 6   | 30                                |
| 7   | 41                                |
| 8   | 53                                |
| 9   | 59                                |
| 10  | 64                                |
| 11  | 68                                |
| 12  | 71                                |
| 13  | 76                                |
| 14  | 80                                |
| 15  | 85                                |
| 16  | 88                                |
| 17  | 91                                |
| 18  | 95                                |
| 19  | 98                                |
| 20  | 100                               |

Table 2 shows the percent output voltage at various input command signal levels. The variable time base firing circuit picks the minimum length time base to maintain as constant a power level to the heating elements as possible. By doing this, thermal shock and mechanical abuse to the heating elements is reduced and the life expectancy of the element should increase.

NOTE: The percent output voltage for any given command signal is affected by the exact setting of the zero and span potentiometers. Table 2 is to be used only as a reference.

## Section 2 - INSTALLATION

---

### 2-1 MOUNTING

Prior to mounting, verify the voltage and current rating of the power controller. The information is provided on the nameplate located on the left side of the unit. Determine the mounting dimensions from the outline drawing Figures 3, 4, 5, 6, 7 or 8. Mount the unit with line/load terminals to the top so that airflow is upward through the heat sink fins. Ensure that airflow is unrestricted.

Mount the fuse kit and the 24 VAC control transformer as close as possible to the power controller. Refer to Figure 10 for the control transformer's mounting dimensions and schematic. Use Figures 11 and 12 for single and three-phase fuse block dimensions.

#### **WARNING**

**Branch circuit overcurrent protection is required to be provided in accordance with the national and/or local code of the inspecting authority or equivalent. If it is desired to protect the SCRs, fast clearing semiconductor fuses must be added to the system. Table 3 shows the fuse voltage, fuse current, fuse maximum I<sup>2</sup>T rating and conditional short circuit current (CSCA) rating for each of the power control's ratings.**

### 2-2 LINE/LOAD POWER WIRING

Connect the line/load using appropriately sized and insulated wire/cable per any national or local codes based on the voltage and current rating of the power controller. Torque the line/load power connections to 25 in-lbs. minimum. Refer to Figures 1, 2 or 3 for all power connections.

**NOTE: a minimum rating of 75°C wire is required by UL for all power connections to the power control.**

**TABLE 3**

| UNIT CURRENT (A) | FUSE VOLTAGE | FUSE CURRENT | FUSE I <sup>2</sup> T | CSCA    |
|------------------|--------------|--------------|-----------------------|---------|
| 15A              | 700          | 20           | 157                   | 200,000 |
| 25A              | 700          | 30           | 427                   | 200,000 |
| 40A              | 700          | 50           | 950                   | 200,000 |
| 70A              | 700          | 80           | 4085                  | 200,000 |

**NOTE:** The Conditional Short Circuit Current (**CSCA**) rating is the maximum current the fuse can safely clear and this rating must be higher than the current the branch circuit can supply.

### 2-3 SAFETY ISSUES

The rated operational voltage of each power controller is shown on it's nameplate, i.e. 120V, 240V, 400V, 480V, or 575V. The power controller is designed to operate between +10% and -15% of this rated operational voltage in an Over Voltage Category III environment.

**WARNING**

**Power control units are not suitable to provide isolation due to the use of semiconductors and other components that allow a small current to flow from line to load even when the unit is in the non-conducting mode.**

The voltage drop across the switching semiconductor while in the conducting mode is approximately 1.5 volts and is somewhat a function of current. To calculate the power control's power loss, multiply the load current times 1.5 time the number of controlled phases.

The minimum operational current and the maximum off state current for each unit is shown in Table 4.

The power controls described in this instruction manual are designed to operate in a pollution degree 2 environment.

**TABLE 4**

| UNIT CURRENT (A) | MINIMUM OPERATING CURRENT (ma) | MAXIMUM OFF CURRENT (ma) |
|------------------|--------------------------------|--------------------------|
| 15A              | 100                            | 15                       |
| 25A              | 100                            | 15                       |
| 40A              | 100                            | 15                       |
| 70A              | 100                            | 15                       |




**HAZARDS EXIST**




**DANGEROUS VOLTAGES EXIST**


**Figure 1 – LINE/LOAD POWER WIRING ZF1 MODELS**

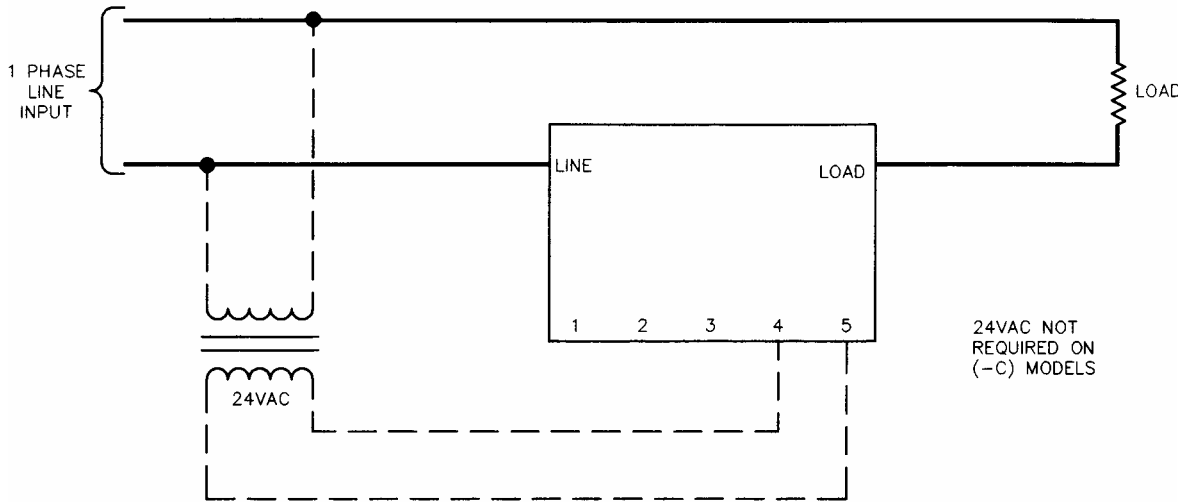


**Figure 2 – LINE/LOAD POWER WIRING ZF2 MODELS**

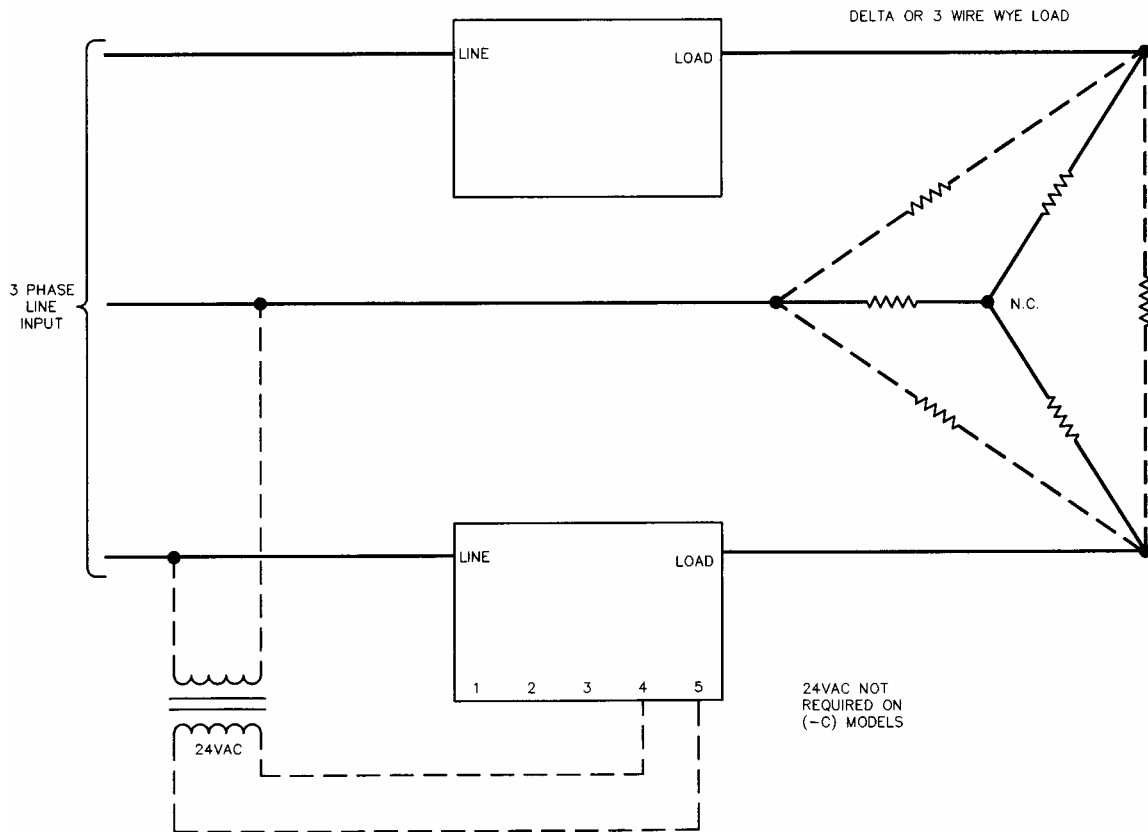

**Figure 3 – LINE/LOAD POWER WIRING ZF3 MODELS**

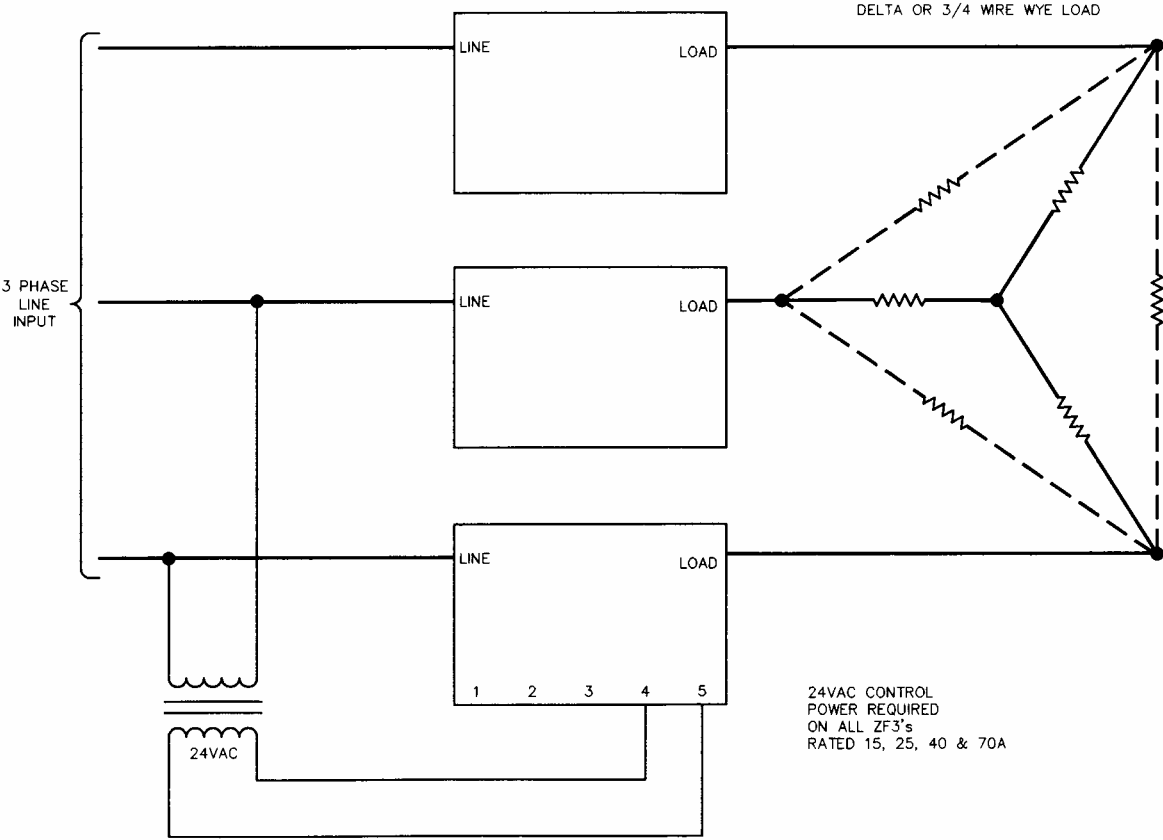

**Figure 4 - OUTLINE and MOUNTING DIMENSIONS ZF1 - 15, 25 & 40A**

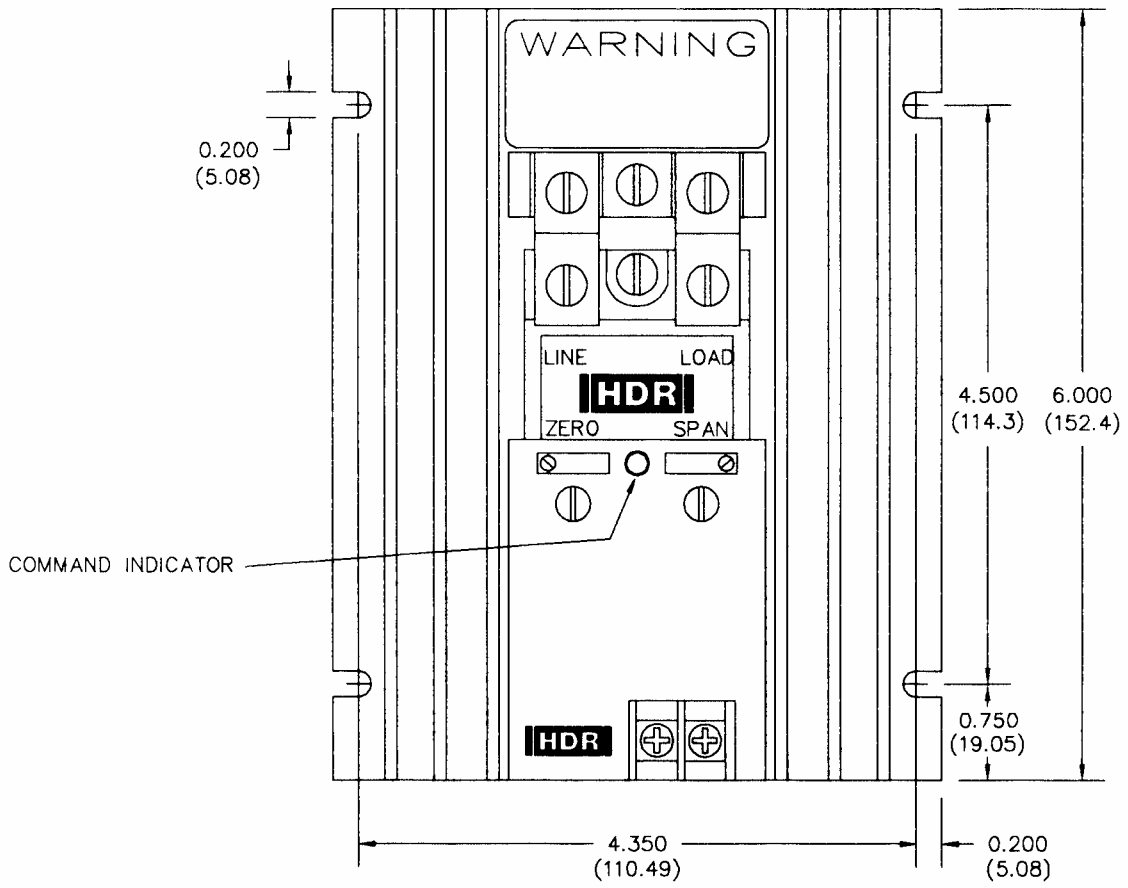

**Figure 5 – OUTLINE and MOUNTING DIMENSIONS ZF1 – 70A**




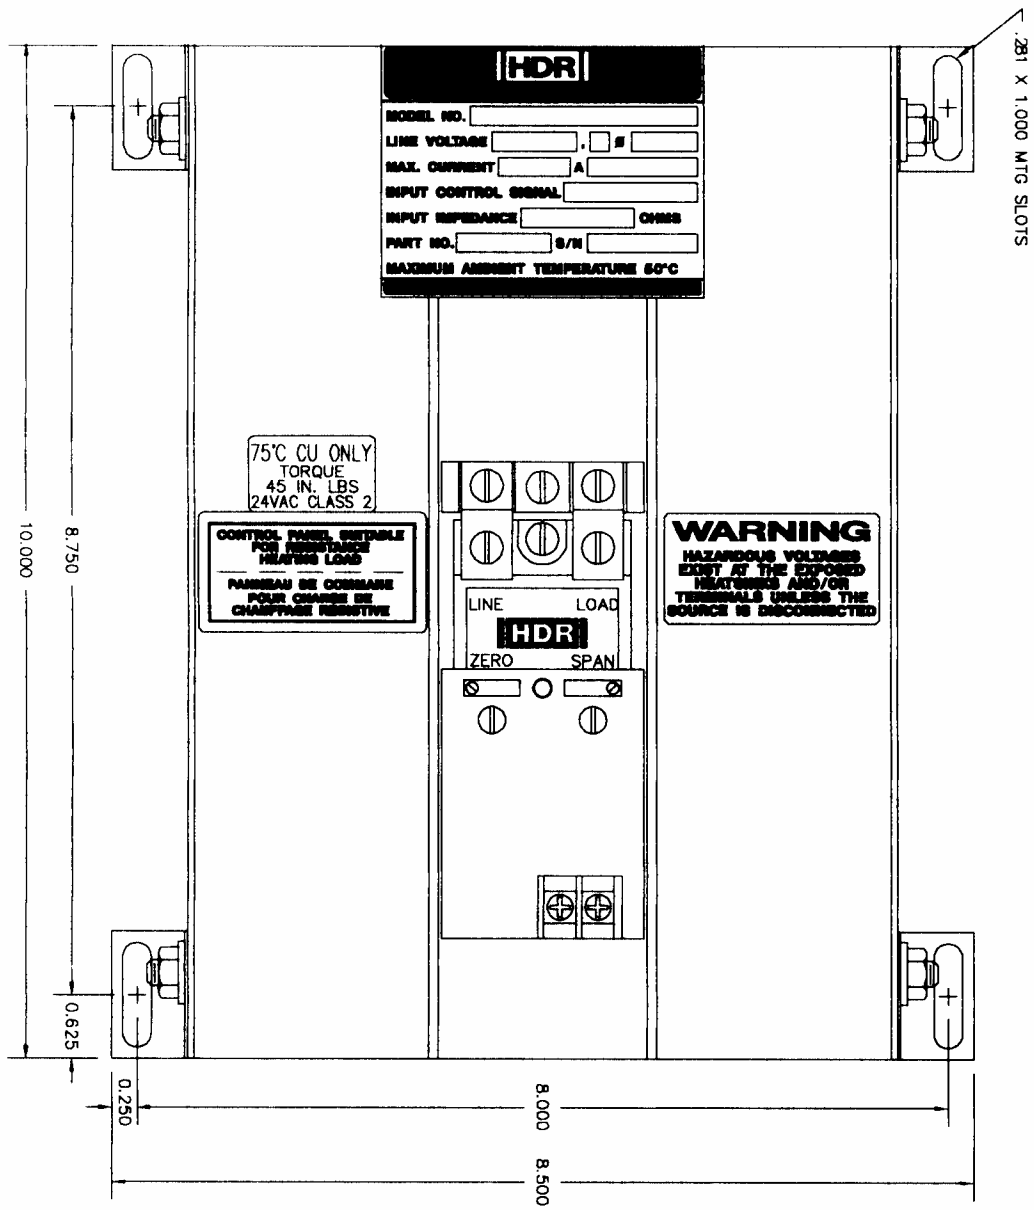


Figure 6 – OUTLINE and MOUNTING DIMENSIONS ZF2 – 15, 25 & 40A

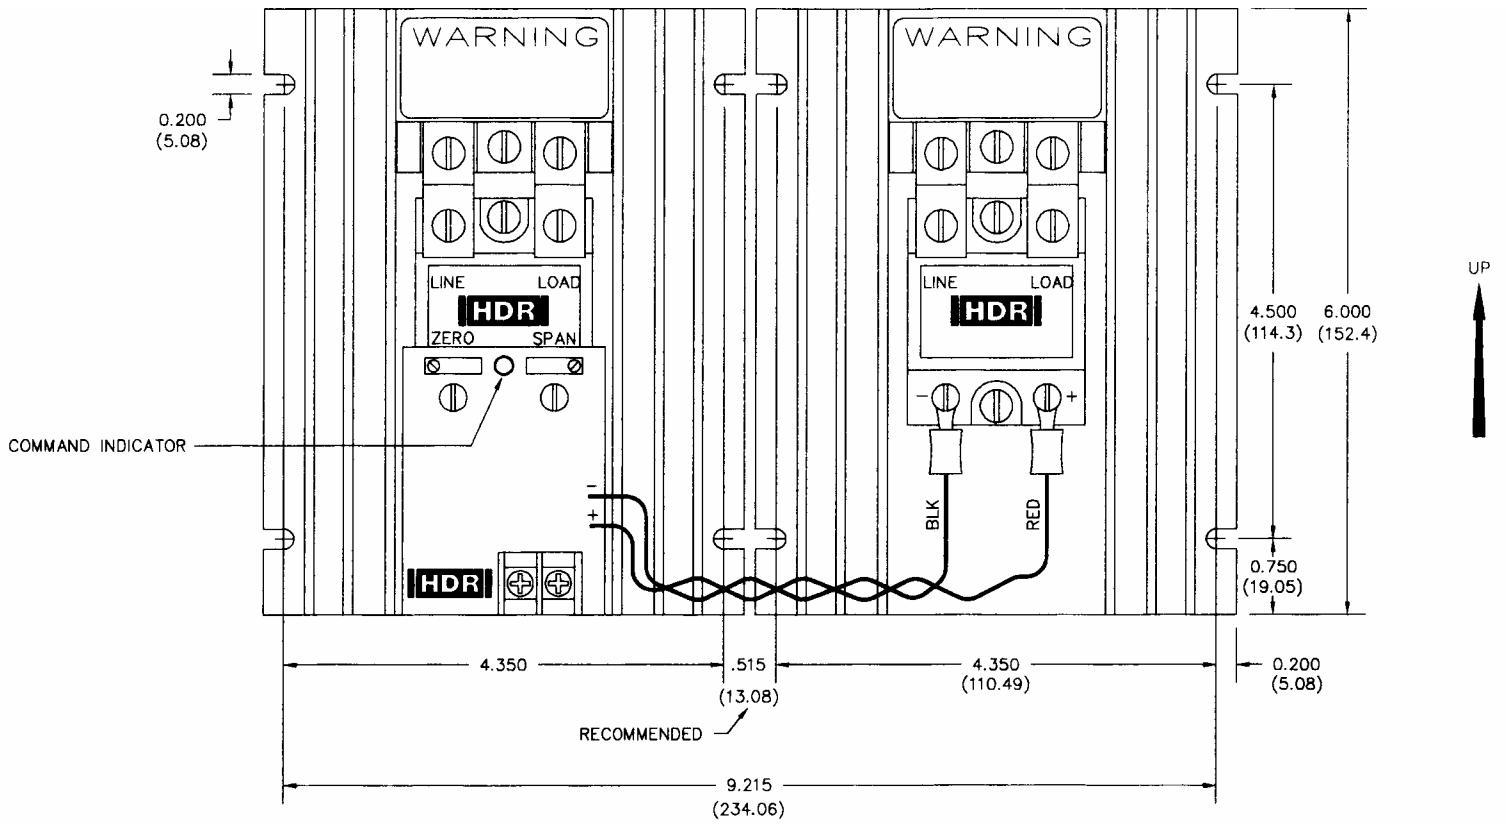

**Figure 7 – OUTLINE and MOUNTING DIMENSIONS ZF2 – 70A**


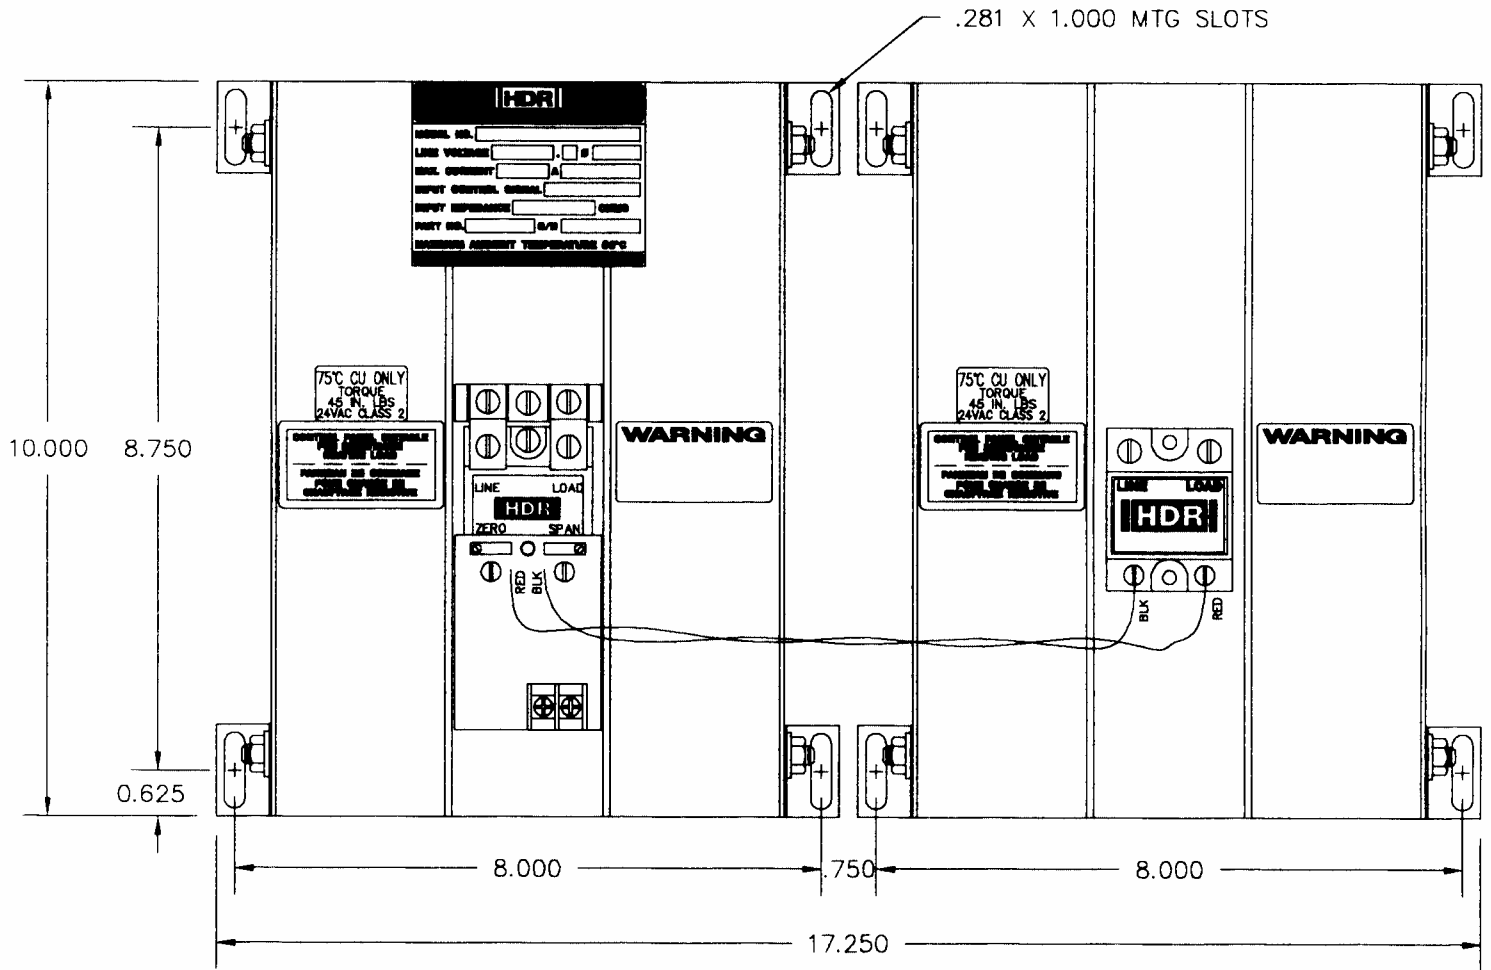


Figure 8 – OUTLINE and MOUNTING DIMENSIONS ZF3 – 15, 25 & 40A

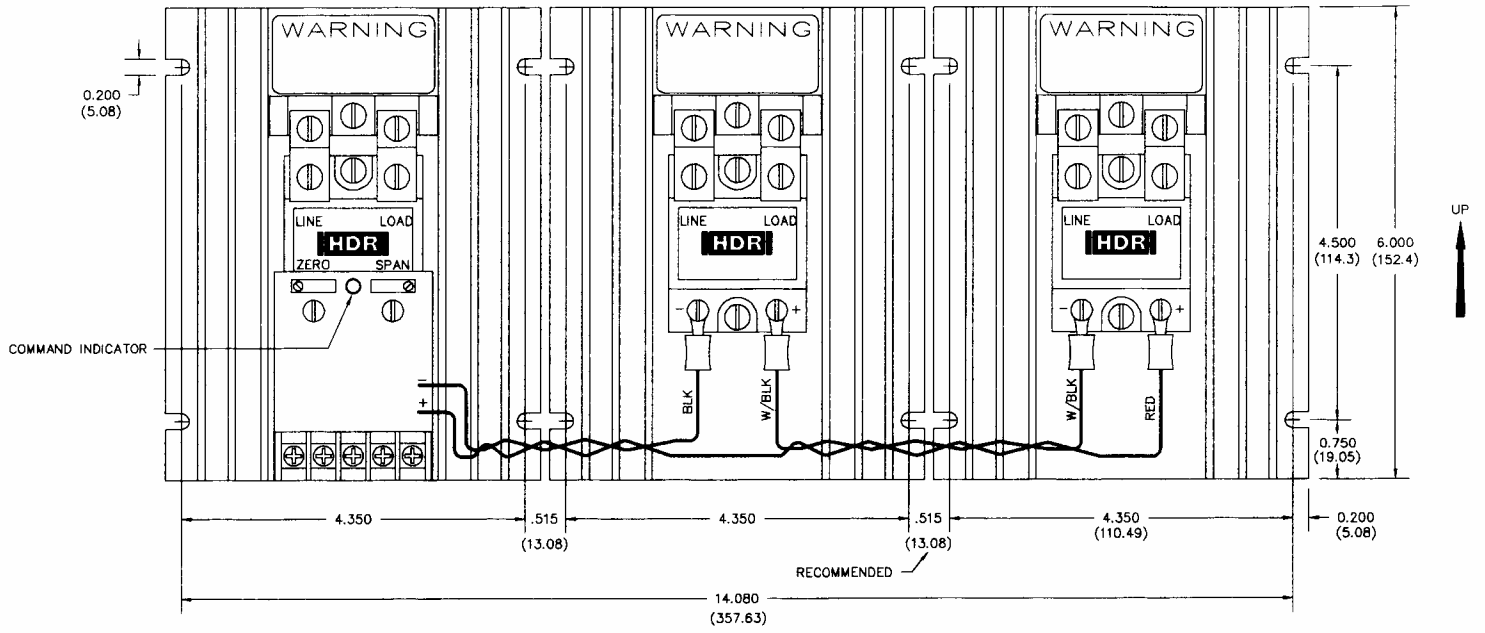

**Figure 9 – OUTLINE and MOUNTING DIMENSIONS ZF3 – 70A**



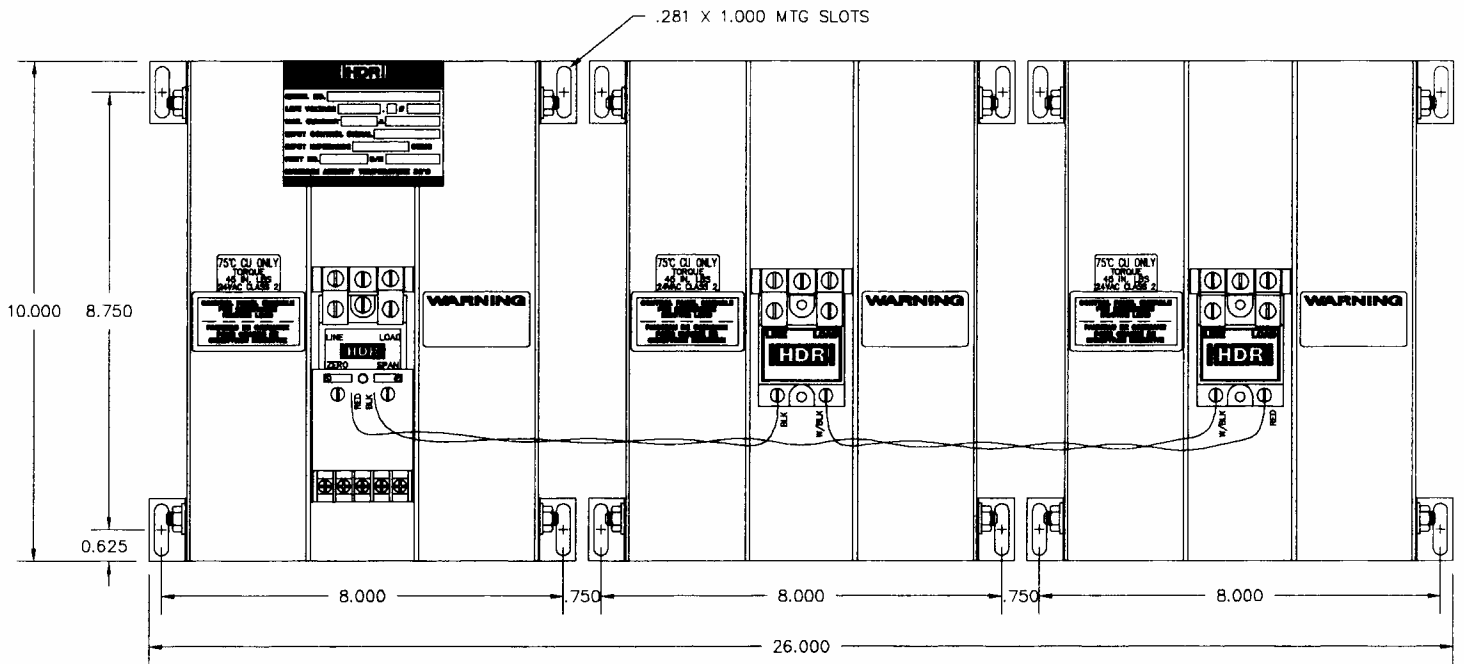



Figure 10 – 24 Vac Transformer

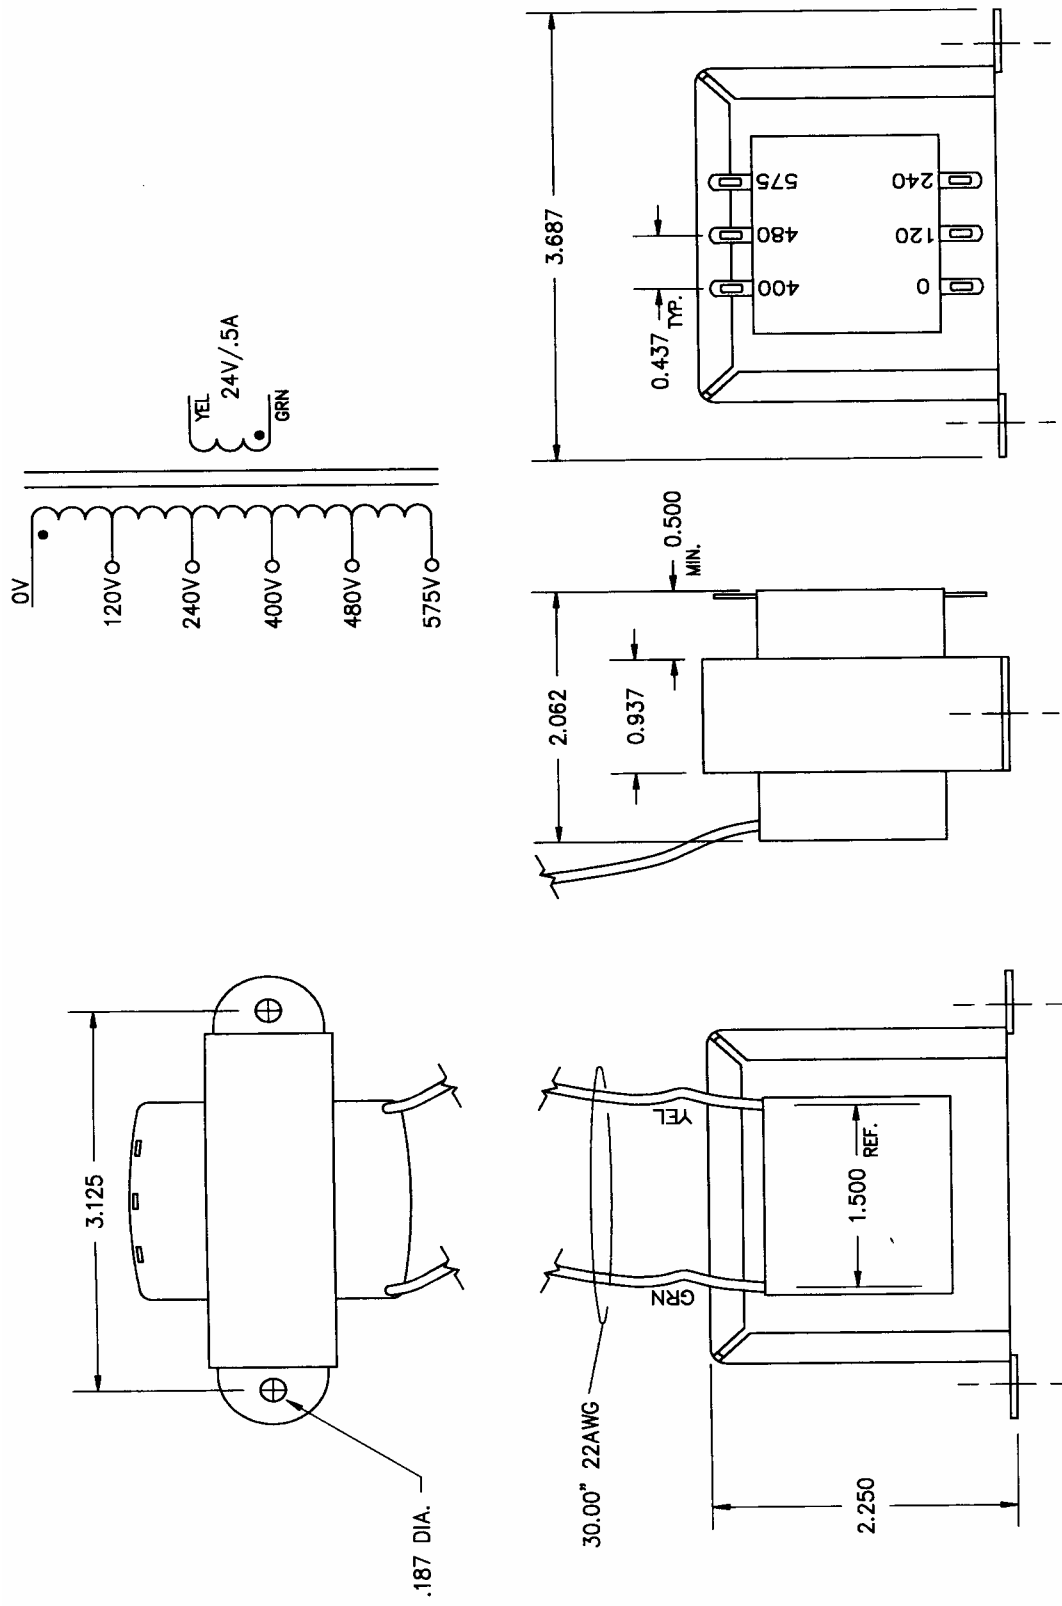

**Figure 11 – SINGLE-PHASE FUSE BLOCK DIMENSIONS**

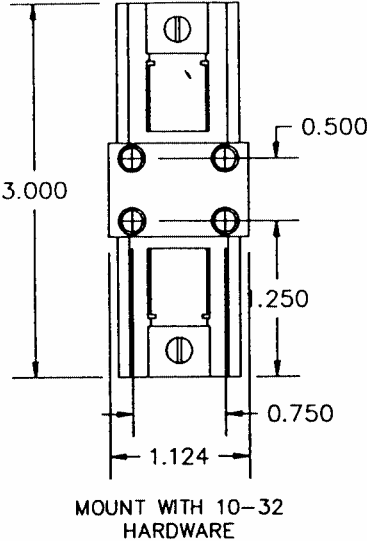


**15/25 AMP**

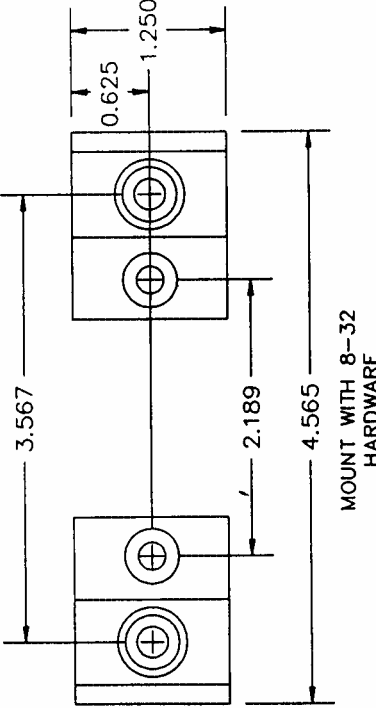


**40/70 AMP**

**Figure 12 – THREE-PHASE FUSE BLOCK DIMENSIONS**

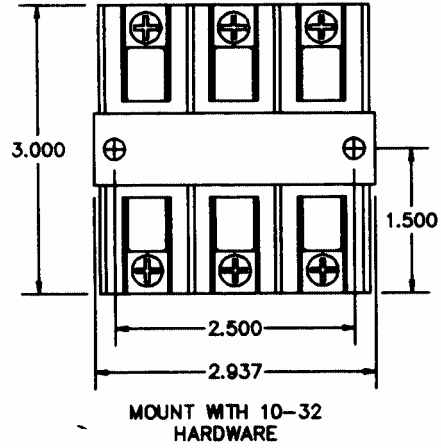

**15/25 AMP**

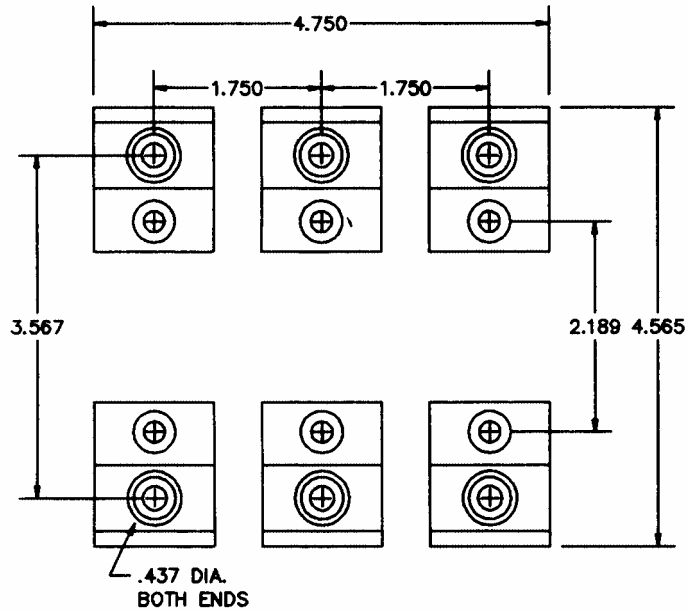

**40/70 AMP**



## Section 3 - COMMAND SIGNAL CALIBRATION

---

### 3-1 ZERO AND SPAN ADJUSTMENTS

On (-V) models (voltage input) the Zero potentiometer has both positive and negative voltages available making it usable as a manual or zero control. By turning the Zero control clockwise the unit's output voltage will increase proportionally to the adjustment. Turning it counter-clockwise will decrease the output, or zero the output for a non-zero based command signal. Zero is mid rotation.

On (-C) models (4-20ma current input only) the Zero potentiometer has only the negative voltage available and, therefore, can only be used for zeroing the output for a 4-20ma command signal. Because the power controller pulls it's operating power from the 4-20ma source, no other device can be series or parallel connected.

The Span potentiometer on both (-V) & (-C) models is used to adjust the maximum output level. It will adjust for either a remote manual control or a command signal input. Clockwise adjustment increases the output while counter-clockwise adjustment decreases the output. Due to some interaction between controls, it may be necessary to repeat both the zero and span adjustments.

### 3-2 COMMAND INDICATOR

The Command Indicator is a green Light Emitting Diode (LED) located between the Zero and Span controls. The flash rate of this LED will vary in synchronization with the output of the unit. The rate will be faster with higher outputs and slower with lower outputs.

### 3-3 REMOTE MANUAL CONTROL (-V MODELS ONLY)

**NOTE: A remote manual control cannot be used on a (-C) model.**


Start with the Zero Control set approximately at mid rotation and the Span Control set minimum (counter-clockwise). Connect a 5K ohm remote manual control as shown in Figure 13. With the unit energized and the remote manual control fully counter-clockwise, adjust the Zero Control until the unit is just off. Next turn the remote manual control fully clockwise and adjust the Span Control until the desired output voltage is reached. This procedure may have to be repeated since some interaction between the Zero and Span Controls exist. The exact setting of the zero and span controls can affect the linearity, so be as precise as possible.

### 3-4 PROCESS COMMAND SIGNAL


This procedure is similar to the Remote Manual Control procedure. Start with the Zero Control set approximately at mid rotation and the Span Control set at minimum. Connect the Command Signal with the (-) on terminal 1 and the (+) on terminal 2. Refer to Figure 14 for (-V) Models, and to Figure 15 for (-C) Models. Then energize the unit. With the Command Signal at minimum, adjust the Zero Control so the unit is just off (zero output voltage); next, with the Command Signal at full output, adjust the Span Control so the output voltage is at the desired output level. Repeating this procedure may be necessary due to some interaction between the Zero and Span Controls.

**NOTE: The (-V) models will accept a 0-5 VDC/0-10 VDC, 4-20 ma or a manual control input. The (-C) model will only accept a 4-20 ma input and cannot be series or paralleled with other units.**


**Figure 13 - REMOTE MANUAL CONTROL (-V) MODELS**

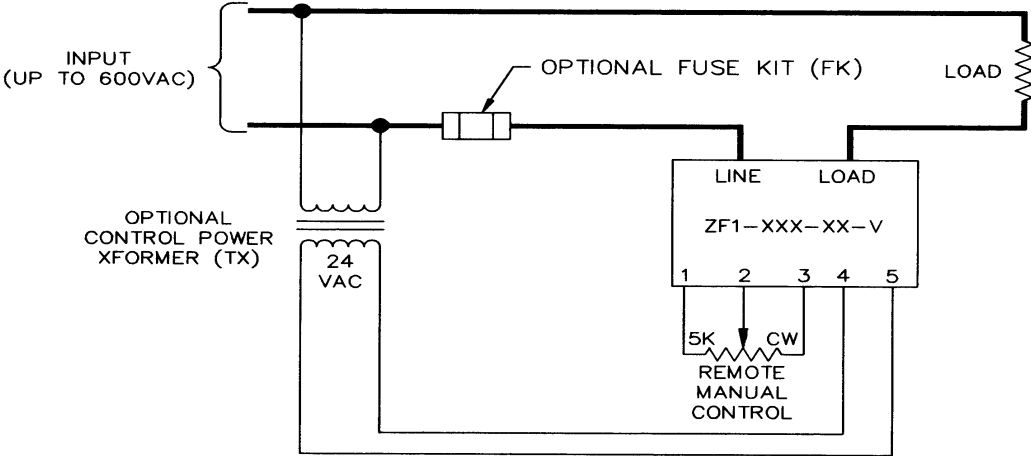

**Figure 14 - PROCESS COMMAND SIGNAL (-V) MODELS**

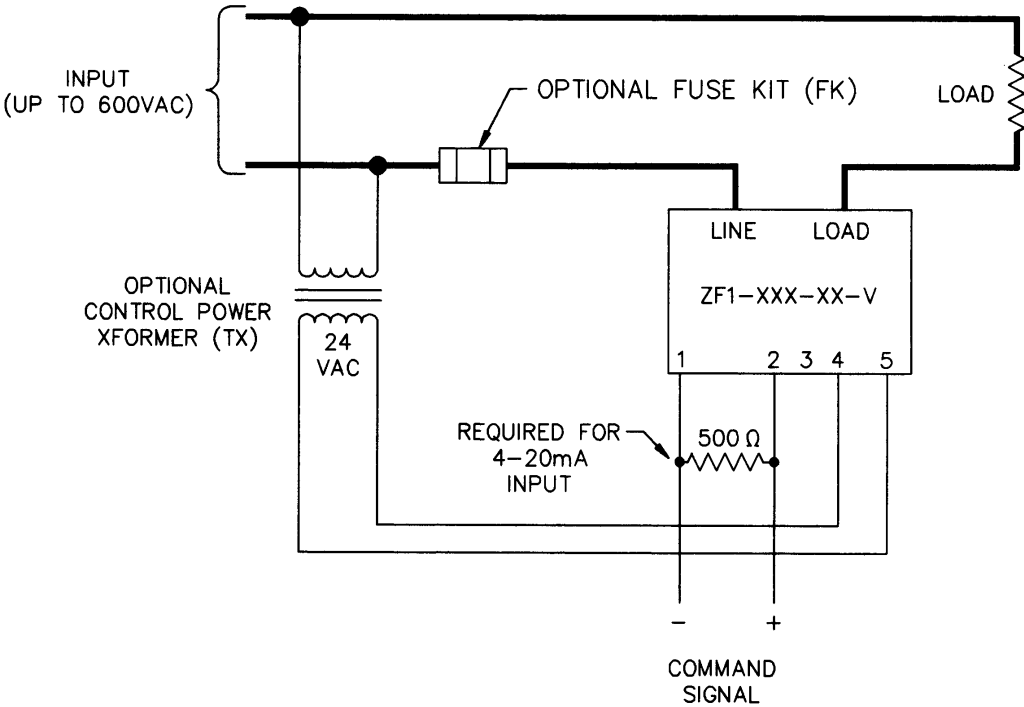

**Figure 15 - PROCESS COMMAND SIGNAL (-C) MODELS**

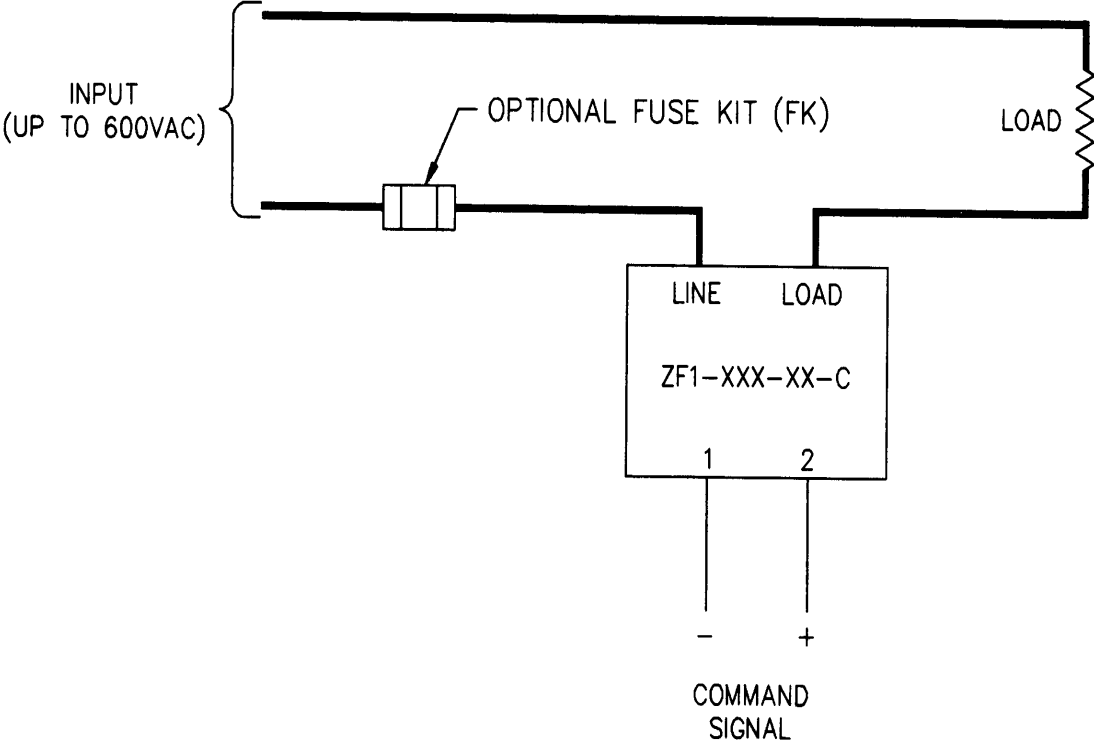

## Section 4 - MAINTENANCE

---

### 4-1 ENVIRONMENTAL CONCERNS

Always verify that the power control is mounted in a clean, dust free environment. Clean the heat sink(s) and printed circuit board periodically so no dust or dirt accumulates on the unit. Dust or dirt on the heat sink fins can prevent proper airflow and heat dissipation causing overheating of the semiconductors. Conductive dust or dirt can cause shorts or arcing, which can cause damage to the unit.

### WARNING

**DISCONNECT ALL SOURCES OF POWER TO THE POWER CONTROLLER PRIOR TO CLEANING. THE UNIT IS NOT SUITABLE FOR HOSE DOWN CLEANING. USE VACUUM, BRUSH OR LOW PRESSURE AIR.**

### 4-2 LINE/LOAD POWER CONNECTIONS

Periodically turn the power off to the ZF1 and check for corrosion and tightness of the power connections. If any corrosion is evident, clean the cables and connectors and reconnect them. Tighten them to 25 in-lbs.

### 4-3 TROUBLESHOOTING TYPICAL SYMPTOMS

Any one of the following problems can be repaired in the field. Any other problems require returning the power controller to HDR for servicing.

- Symptom** - No output.  
**Cause** - Open fuse or no 24 VAC control power on (-V) Models.  
**Solution** - Disconnect the input power and check the fuse, replace the fuse if faulty. If the fuse checks ok, verify the 24 VAC control power on terminals 4 & 5 if the unit is a (-V) Model. If neither of these solve the problem, contact the factory.
- Symptom** - Full output regardless of command signal level.  
**Cause** - Shorted SSR module or defective firing circuit.  
**Solution** - Readjust the zero and span controls. If this does not help, disconnect the input power and remove the firing circuit. Re-energize, if the output is on full, replace the SSR module. If the output is off, then most likely the firing circuit is defective. Consult the factory.

3. **Symptom** - The unit is not variable from 0 to full output.  
**Cause** - Defective firing circuit.  
**Solution** - If neither of the first two symptom/solutions are the answer, order a replacement firing circuit from the factory.

## WARRANTY

AMETEK HDR warrants that the equipment delivered will be free from defects in workmanship and material for a period of five years from the date of shipment. AMETEK HDR will repair or replace, at AMETEK HDR's option, any part found defective during proper and normal use, provided that written notice of the nature of the defect is received by AMETEK HDR within the five year warranty period and that the customer returns the part to AMETEK HDR freight paid both ways. This warranty is not transferable by the initial end user.

AMETEK HDR MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED (INCLUDING, WITHOUT LIMITATION, MERCHANTABILITY, FITNESS FOR PURPOSE, OR AGAINST INFRINGEMENT OF ANY PATENT) EXCEPT AS EXPRESSLY PROVIDED HEREIN.

THE REMEDY OF REPAIR OR REPLACEMENT IS CUSTOMER'S SOLE AND EXCLUSIVE REMEDY AND WILL SATISFY ALL OF AMETEK HDR'S LIABILITIES, WHETHER BASED ON CONTRACT, NEGLIGENCE, TORT, PRODUCT LIABILITY, STRICT LIABILITY, OR OTHERWISE. IN NO EVENT WILL AMETEK HDR BE LIABLE FOR INCIDENT OR CONSEQUENTIAL DAMAGES, NOR IN ANY EVENT SHALL HDR'S LIABILITY EXCEED THE UNIT PRICE OF ANY DEFECTIVE PRODUCT OR PART.



**EC DECLARATION OF CONFORMITY**

**WE:**           **AMETEK HDR POWER SYSTEMS**  
3563 Interchange Road  
Columbus, Ohio 43204 - USA

**Declare under our sole responsibility that the products listed below and bearing the CE label:**

**Type:**   SCR power controllers with the following model designations and current ratings:

ZF1, ZF2, ZF3, PF1, PF3 - 15, 25, 40, 60, 70, 90,  
120, 180, 225, 350, 500, 650, 800, 1000 and 1200A.  
SHZF1, SHPF1 - 15, 30, 40, 60, 70, 90 and 120A  
SHZF2, SHZF3, SHPF3 - 15, 25, 30, 60, 90, 120, 180 and 225A  
SCZF1, SCPF1 - 15, 25, 40 and 65A

**To which this declaration relates is in conformity with the technical requirements of the following documents:**


|               |  |              |                     |
|---------------|--|--------------|---------------------|
| <b>Title:</b> | Low-voltage switchgear<br>and control gear                 | <b>No.</b>   | IEC 947-5-1         |
|               |  | <b>Year:</b> | 1990-03             |
|               | Low Voltage Directive                                      | <b>No.</b>   | IEC 73/23/EEC       |
|               |  | <b>Year:</b> | 1973-02             |
|               | Degrees of protection provided<br>by enclosures (IP Code): | <b>No.</b>   | IEC 529-2nd Edition |
|               |  | <b>Year:</b> | 1989-11             |
|               | Electromagnetic Compatibility<br>(EMC)                     | <b>No.</b>   | IEC 89/336/EEC      |
|               |  | <b>Year:</b> | 1989-05             |

**Warning**  
**All phase-fired (PF) controllers will require line filters  
and possibly shielded cables to meet the EMC  
requirements.**

(Environmental protection classification IP00 - for mounting inside an enclosure)

**Note:**           Characteristics are according to manufactures specifications.

**Name:** George A. Sites

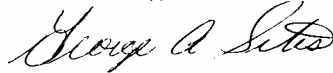

**Title:**   Vice President

**Date:**   November 9, 2000

Declaration written in accordance with I.S.O. – IEC/22 Guide.